



BC 33 ESB

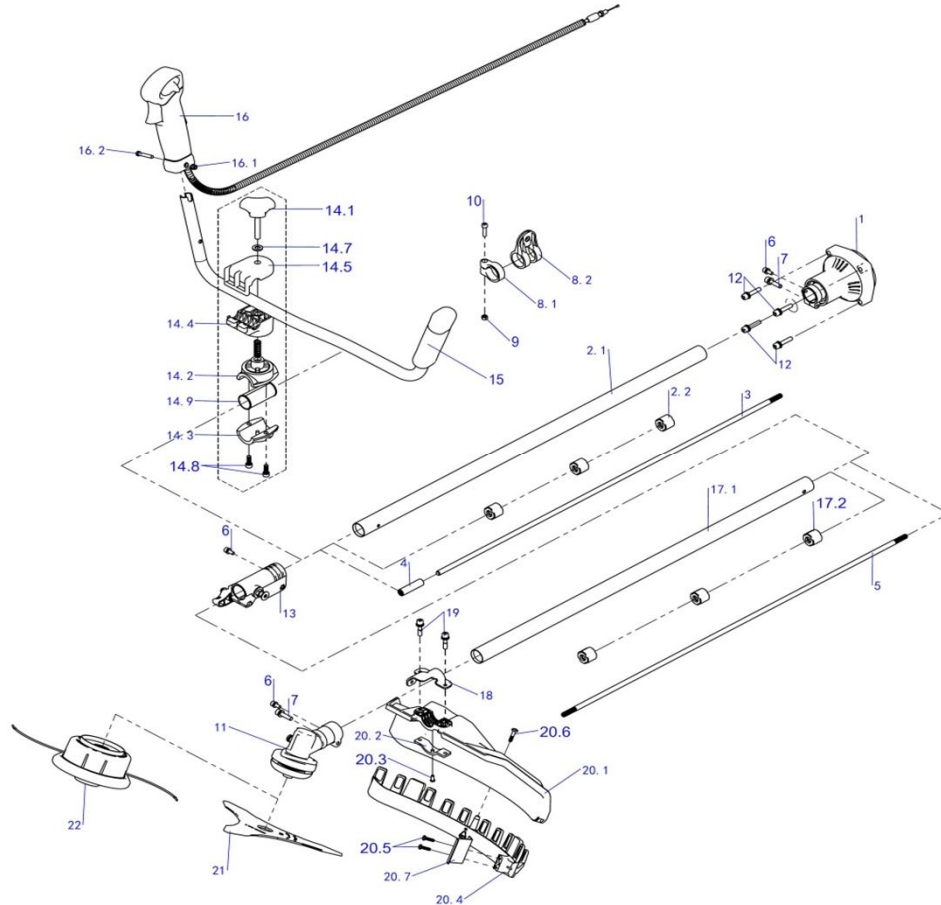

No	Code	Name	Qty	No	Code	Name	Qty
1	044701	Connector assy A	1	14,7		Flat washer 8	1
2	044702	Aluminum working shaft $\phi 26 \times 760$ l Assy	1	14,8		M6x16 Screw	2
2,1		Aluminum working shaft $\phi 26 \times 760$ l	1	14,9		rubber sleeve	1
2,2		Oil-retaining bearing	3	15	044709	Handle left part	1
3	044703	Hardness axes $\phi 8 \times 762$	1	16	044670	Handle right part	1
4	044704	Hard Shaft Joint	1	16,1		M5_lock nut	1
5	044705	Hardness axes $\phi 8 \times 762A$	1	16,2		M5X30 Screw	1
6		M5x12 Screw	3	17	044710	Aluminum working shaft $\phi 26 \times 735$ l1 Assy	1
7		M6x25 Screw	2	17,1		Aluminum working shaft $\phi 26 \times 735$ l1	1
8		Belt Connector assy	1	17,2		Oil-retaining bearing Assy	3
8,1	013483	Belt Connector fixed block	1	18		Fixed plate for the guard(26mm)	1
8,2	013485	Belt Connector	1	19		M6x25_Half Tooth Screw	2
9		M5_Nut	1	20	042158	Protection guard C1	1
10		M5x20 Screw	1	20,1		Protection guard C	1
11	044706	Gear Case	1	20,2		Protection guard C lower platen	1
12		M6x30 Screw	4	20,3		ST4.2x10-H-F	1
13	044707	Steel shaft coupling assy	1	20,4		Protection guard bracket	1
14	044708	Adjustable handle fixed base	1	20,5		ST4.2x16-H-F	2
14,1		M8x60 triangular knob	1	20,6		ST4.8x20-H-F_Half Tooth Screw	1
14,2		$\phi 26$ Rotating seat	1	20,7	046326	Nylon line cutting blade	1
14,3		$\phi 26$ holding plate	1	21	017131	New 3T blade	1
14,4		$\phi 19$ Rotating seat	1	22	028041	Spool Assy	1
14,5		$\phi 19$ holding plate	1				
14,6		Spring	1				

BC 33 ESB Shaft explode view list

BC 33 ESB

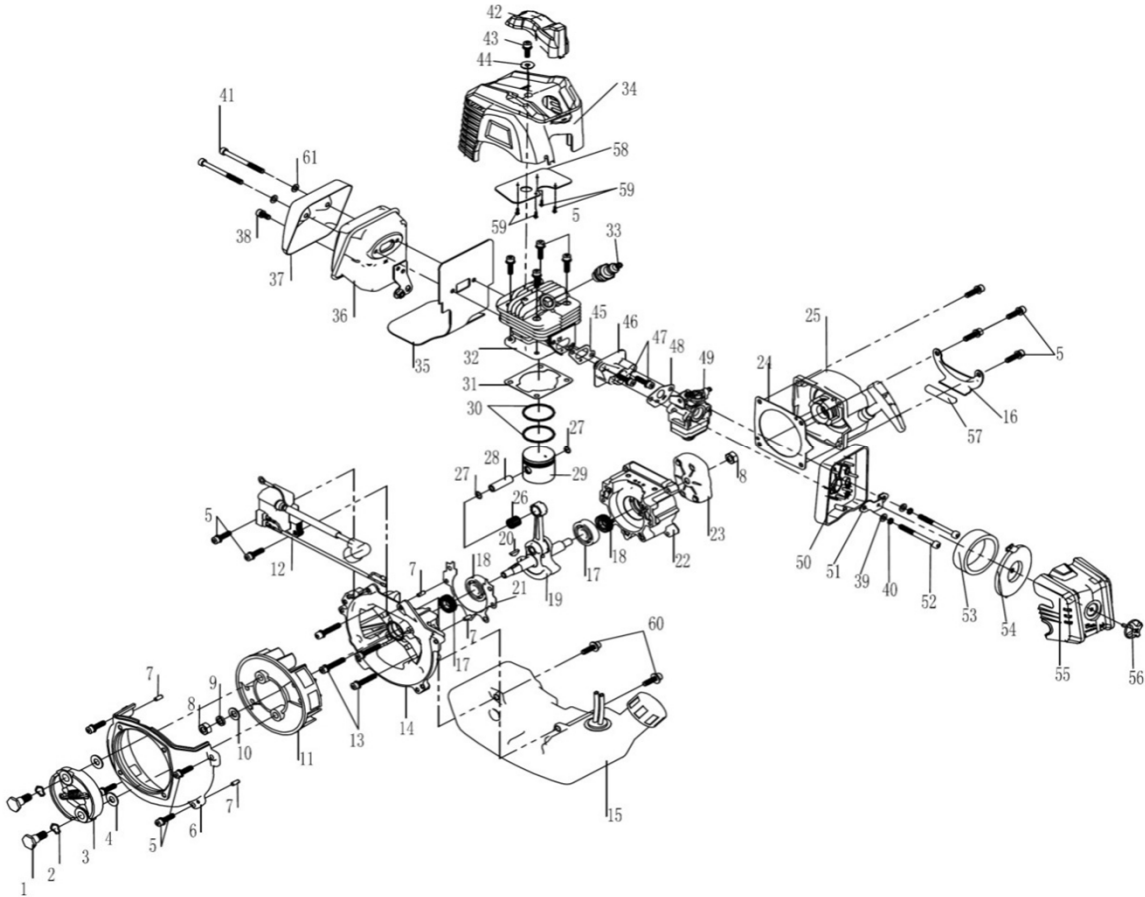

No	Code	Name	Qty	No	Code	Name	Qty
1	040197	Screw axes	2	25	044695	Starter assy	1
2		Wave washer	2	26	046357	Needle bearing-small head	1
3	040198	Clutch	1	27	046358	Piston pin check ring	2
4		Washer B	2	28	046360	Piston pin	1
5		M5x20 screw	14	29	044696	Piston	1
6	046352	Fly wheel cover	1	30	044697	Piston ring	2
7		Round pin B4x10	4	31	046361	Cylinder gasket	1
8		M8 nut	2	32	044698	Cylinder	1
9		Spring washer 8	1	33	010866	Spark plug	1
10		Flat washer 8	1	34	046362	Engine case cover	1
11	044621	Fly wheel	1	35	046363	Muffler gasket assy	1
12	044659	Ignition coil	1	36	046364	Muffler assy	1
13		M5x30 screw	4	37	046364	Muffler steel cover	1
14	046353	Front-half crankshaft case	1	38		M5x12 screw	1
15	044693	Fuel tank assy	1	39		Flat washer 5	2
16	046354	Fuel tank holding plate	1	40		Spring washer 5	2
17		Oil seal TC12x22x7	2	41		M6x60 screw	2
18	021115	Bearing 6201	2	42	046365	Top cover	1
19	044694	Crankshaft	1	43		M5x16 screw	1
20	032478	Half-round key3*5*13	1	44		Flat washer 5.5x15x1	1
21	046355	Crankshaft gasket	1	45	046366	Inlet gasket	1
22	046356	Back-half crankshaft case	1	46	044699	Inlet pipe	1
23	044663	Starter catch plate	1	47		M5x25 screw	2
24	040227	Starter gasket	1	48	046367	Carburator gasket	1

BC 33 ESB Engine explode view list

