


## VET 2000 P

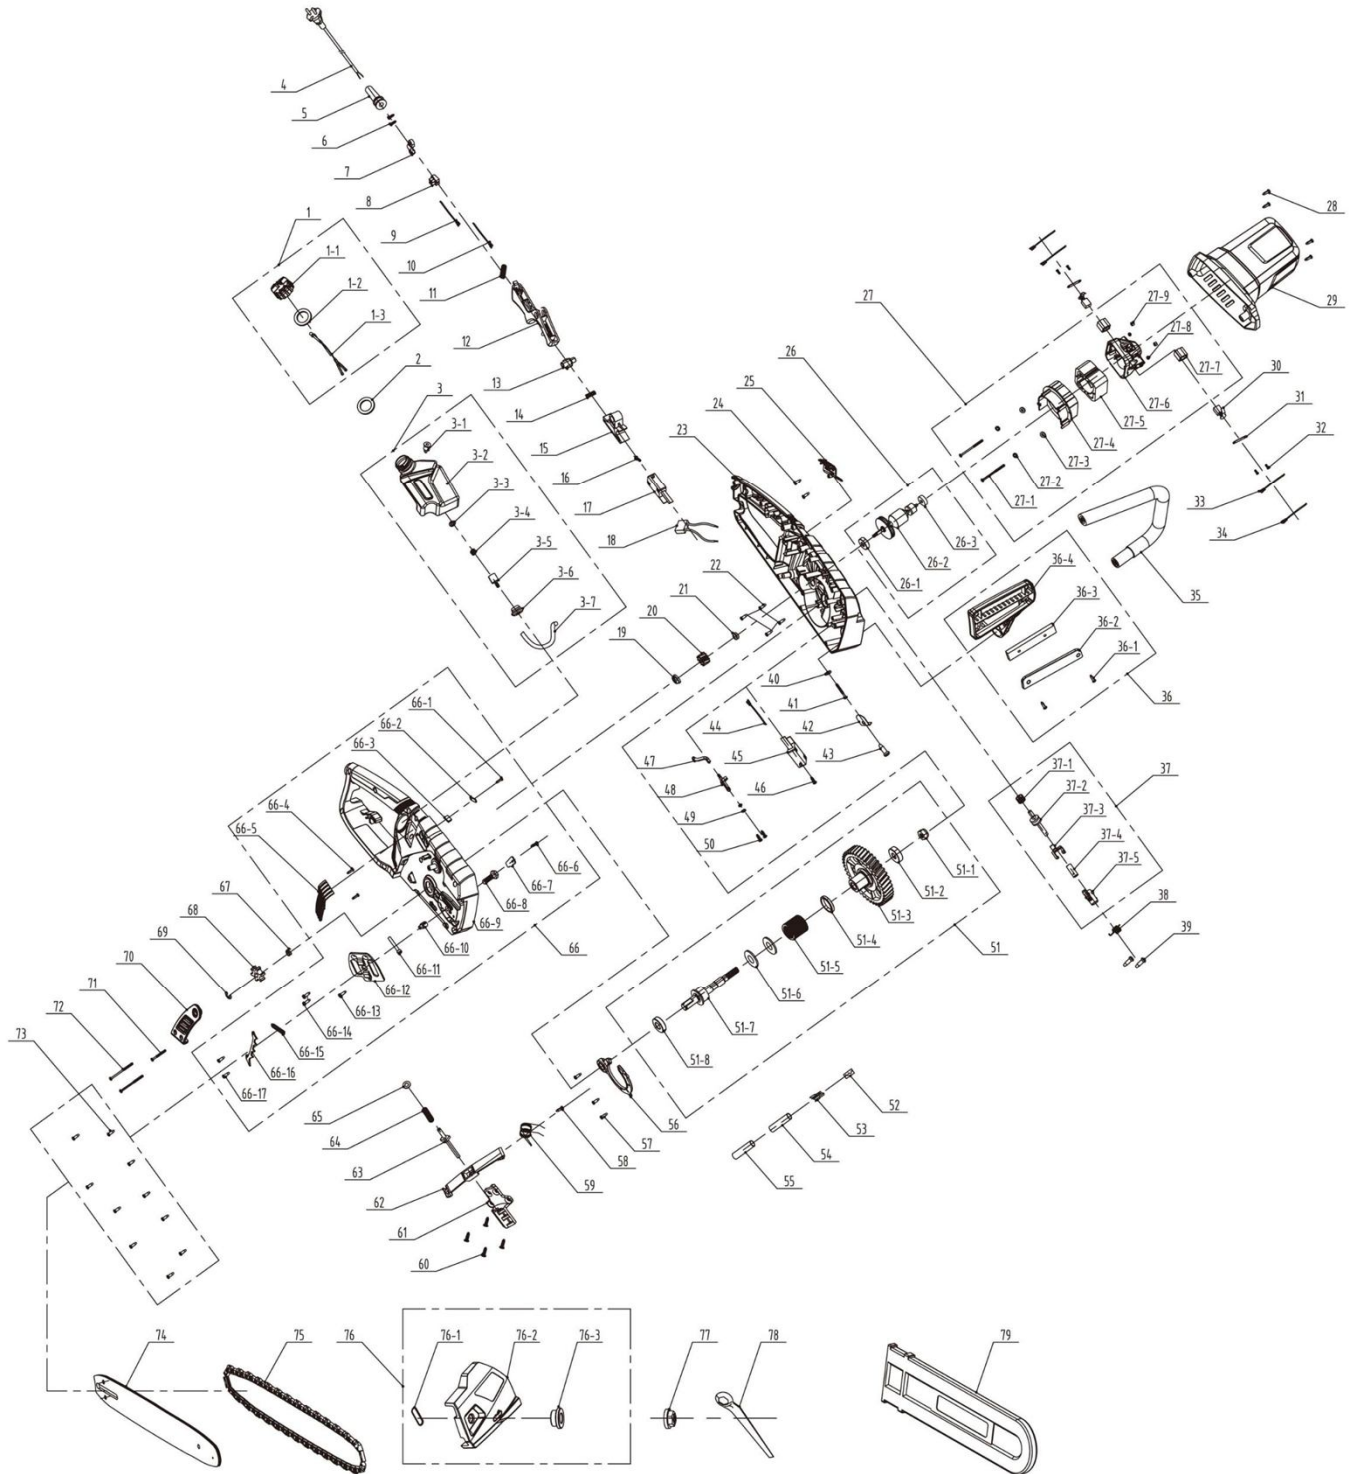



# EXPLODED PARTS LIST

Year: 2017

Page(s): 2/3

## VET 2000 P

No	Code	Name	Qty	No	Code	Name	Qty
1	040263	Oil tank cap assy	1	27-9		Hexagon nut	2
1-1		Oil tank cap	1	28		Self-tapping screw	4
1-2		Seal ring	1	29	040274	Rear motor hood	1
1-3		Anti loss hook for oil tank cap	1	30	040275	Carbon	2
2		Rubber gasket	1	31		Brush holder clamp	2
3	040264	Oil tank assy	1	32		Self-tapping screw	4
3-1		Valve	1	33		Connecting wire	2
3-2		Oil tank	1	34		Connecting wire	2
3-3		Oil tank joint plug	1	35	040276	Front handle	1
3-4		Foam	1	36	040277	Guard plate assy	1
3-5		Direct head of oil tank	1	36-1		Self-tapping screw	2
3-6		Oil tank outlet seal ring	1	36-2		Impact block cover	1
3-7		Transarent tube	1	36-3		Impact block	1
4		Cable	1	36-4		Guard plate	1
5		Cable sheath	1	37		Oil pump assy	1
6		Self-tapping screw	2	37-1		Worm gear tooth	1
7		Cable clamp	1	37-2		Worm gear	1
8		Terminal	2	37-3		Piston support	1
9		Connecting wire	1	37-4		Piston sleeve	1
10		Connecting wire	1	37-5		Oil pump body	1
11		Button spring	1	38		Oil pump tension spring	1
12	040265	Switch button	1	39		Flange self-tapping screw	2
13		Anti lock button	1	40		Brake gasket	1
14		Button spring	1	41		Self-tapping screw	1
15	040266	Middle connecting rod	1	42		Rod clamp	1
16		Self-tapping screw	1	43		Self-tapping screw	1
17	040267	Micro switch	1	44		Connectine wire	1
18		Capacitance	1	45	037363	Micro switch	1
19	040268	Hexagon nuts with flange	1	46		Self-tapping screw	1
20	040269	Motor gear	1	47		Transparent tube	1
21		Motor gear bushing	1	48		Nozzle	1
22		Self-tapping screw	4	49	020329	O - type rubber ring	2
23	040270	Left housing	1	50		Self-tapping screw	2
24		Flange self-tapping screw	2	51		Output shaft assy	1
25		Left cover	1	51-1	033155	Hexagonal jam nut	1
26	040271	Rotor assy	1	51-2	048017	Bearing	1
26-1		Bearing	1	51-3	040278	Output shaft gear	1
26-2		Rotor	1	51-4		Shaft sleeve	1
26-3		Bearing	1	51-5		Brake torsion spring	1
27	040272	Stator assy	1	51-6		Adjusting gasket	2
27-1		Stator screw	2	51-7	040279	Output shaft	1
27-2		Spring washer	2	51-8		Bearing	1
27-3		Plain washer	2	52		Copper strip	1
27-4		Wind shield	1	53		Female terminal	1
27-5		Stator assy	1	54		Heat shrink tube	1
27-6		Rear motor bracket	1	55		Heat shrink tube	1
27-7	040273	Brush holder	2	56		Anti-dust cover	1
27-8		Washer	2	57		self-tapping screw	3

