


VGS 24 P - Base unit

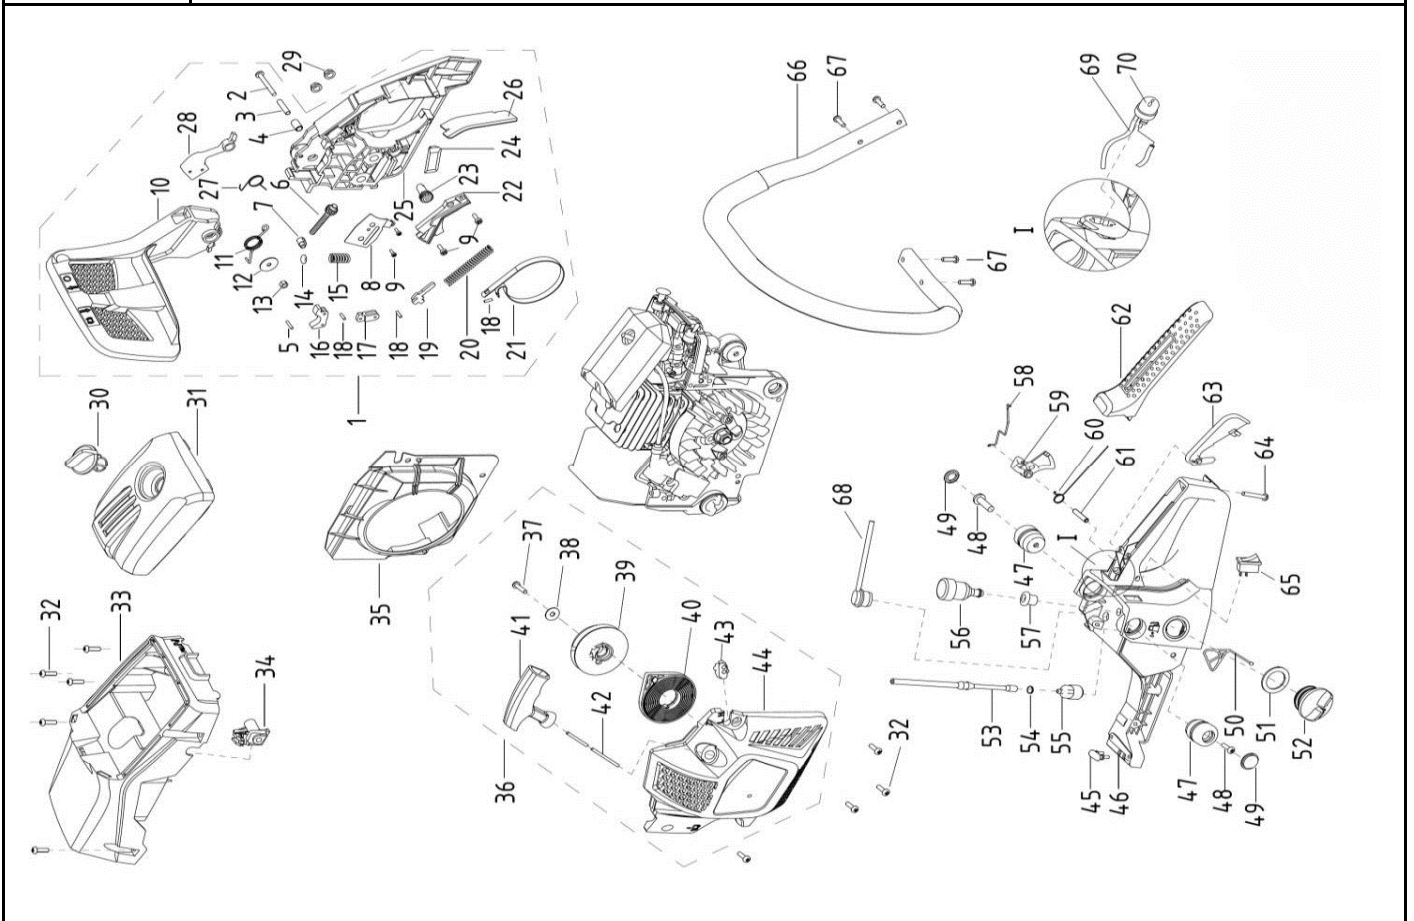


No	Code	Name	Qty	No	Code	Name	Qty
1	031908	right cover assembly	1	25		right cover	1
2		screw M5×40	1	26		dust shield	1
3		shield pipe	1	27		heavy block spring	1
4		pipe	1	28		heavy block	1
5		pin 3×14	1	29	010658	nut M8	2
6	031915	tightener screw	1	30	031910	air filter lock nut	1
7		tension block	1	31	031911	air filter cover	1
8		tensioner cover plate	1	32		screw M5×16	9
9		tapping screw ST4.2×9.5	4	33	031912	upper cover plate	1
10		front damper	1	34		idle adjusting guide set	1
11	010508	brake torsion rod spring	1	35		guide flow cover	1
12		washer 5.2×20×1.2	1	36	031913	starter assembly	1
13		nut M5	1	37		tapping screw ST4.8×14	1
14		spring base	1	38		washer 5	1
15		front damper spring	1	39	10717	starter palte	1
16		main lever	1	40	23056	start coil spring	1
17		secondary pull-rod	1	41	10608	start handle	1
18		pin 3×9	3	42	10609	start stretching wire	1
19		brake control rod	1	43		LH sheathing	1
20		brake spring	1	44		starter cover	1
21		brake strap	1	45		shock rubber	1
22		brake spring cover plate	1	46	031914	base	1
23	031916	tension gear	1	47	10666	shock rubber gland	2
24		chain guide block	1	48		screw	2

VGS 24 P - Base unit

No	Code	Name	Qty	No	Code		
49	10696	dust cover	2	97			
50	010737	anti-drop plate	1	98			
51		O sealing 24.7×3.55	1	99			
52	031919	petrol cover	1	100			
53	010738	fuel tube	1	101			
54		fuel tube circlip	1	102			
55	010739	petrol filter componets	1	103			
56	17065	balancer	1	104			
57	12292	balancer root	1	105			
58	10741	throttle rod	1	106			
59	10743	trigger	1	107			
60	10744	trigger torsion rod spring	1	108			
61	010746	pin6×22	1	109			
62	031918	handle cover	1	110			
63	031917	trigger control rack	1	111			
64		tapping screw ST4.2×22	1	112			
65	017064	extinction switch	1	113			
66		front handle assembly	1	114			
67		tapping screw ST4.8×16	4	115			
68	29887	scavenge nozzle	1	116			
69	017071	pump tube	1	117			
70	10532	Primer bulb	1	118			
71				119			
72				120			
73				121			
74				122			
75				123			
76				124			
77				125			
78				126			
79				127			
80				128			
81				129			
82				130			
83				131			
84				132			
85				133			
86				134			
87				135			
88				136			
89				137			
90				138			
91				139			
92				140			
93				141			
94				142			
95				143			
96				144			

VGS 24 P - Engine parts

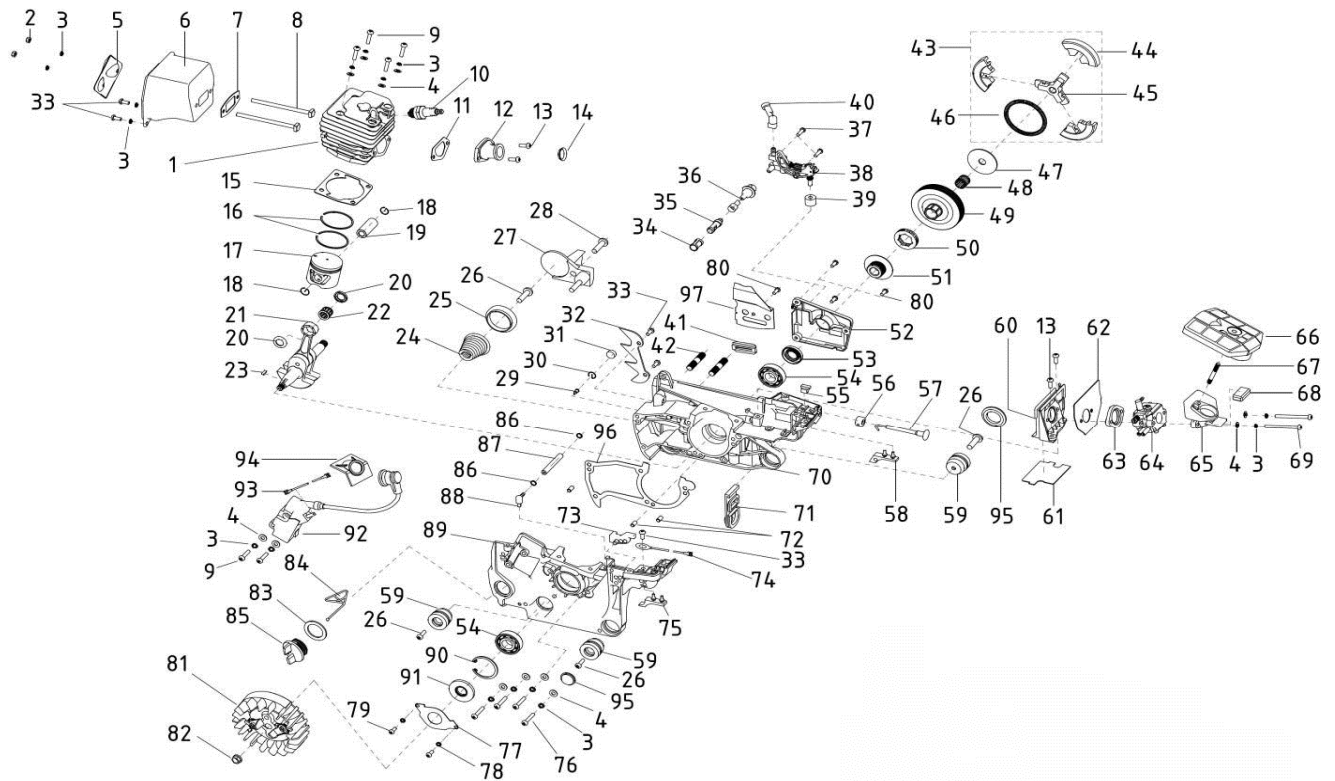

No	Code	Name	Qty	No	Code	Name	Qty
1	010688	cylinder	1	25	017073	conical spreader base	1
2		nut M5	2	26		tapping screw ST4.8×16	4
3		washer 5	15	27	013213	chain shield	1
4		washer 5	13	28		screw M5×16	1
5		muffler cover plate	1	29	026981	aeration jet	1
6	010690	muffler body	1	30		aeration jet circlip	1
7	10612	muffler sealing plate	1	31		sponge transition block	1
8	10613	muffler connecting screw	2	32	031902	pinion rack	1
9		screw M5×20	6	33		screw M5×10	5
10	10542	spark plug	1	34	010637	oil filter screen	1
11	010698	air intake tube sealing plate	1	35	010639	oil filter	1
12	010700	air intake tube	1	36	010642	oil tube	1
13		screw M5×12	4	37		screw M4×14	2
14		hold coil	1	38	10644	oil pump	1
15	10621	cylinder sealing plate	1	39		sponge transition coil	1
16	010704	piston ring	2	40	010760	nozzle	1
17	010706	piston	1	41		chain guide block	1
18	010707	piston pin circlip	2	42	13198	double-screw bolt AYM8-M8×26-8.8	2
19	010708	piston pin	1	43	10648	clutch	1
20	031921	needle bearing ring	2	44		shoe block	3
21	031922	crank shaft components	1	45	10649	retainer	1
22	010712	needle bearing 11×15×12.5	1	46		clutch spring	1
23	10635	semicircular key 3×3.5×10	1	47	010765	clutch adjusting washer	1
24	013211	conical spring base	1	48	10656	needle bearing 12×15×14.5	1

VGS 24 P - Engine parts

No	Code	Name	Qty	No	Code		
49	10657	clutch shell	1	97		damper	1
50	10659	sprocket	1	98			
51	10660	worm	1	99			
52	019891	cover plate	1	100			
53	10661	oil seal 15×28×4.5	1	101			
54	010771	bearing 6202D grade 15×35×11	2	102			
55		cushion block	1	103			
56		choke rod fixation root	1	104			
57	10664	choke rod	1	105			
58		right shock block	1	106			
59	10735	shock seat	3	107			
60	10668	air intake tube support	1	108			
61		tie plate	1	109			
62	10670	sealing plate of air intake support	1	110			
63	010777	air intake tube flange	1	111			
64	010778	carburetor	1	112			
65	10673	air intake socket	1	113			
66	031920	air filter	1	114			
67	010677	double-screw bolt GM5-M5×30	1	115			
68		cushion of air intake socket	1	116			
69		screw M5×50	2	117			
70	31923	right case	1	118			
71		dust plate	1	119			
72		pin 5×10	3	120			
73		earth wire	1	121			
74		guide sleeve	1	122			
75		left shock block	1	123			
76		screw M5×25	5	124			
77	013210	oil shield	1	125			
78		washer 4	2	126			
79		screw M4×8	2	127			
80		screw M4×10	4	128			
81	10680	flywheel assembly	1	129			
82		nut M8×1	1	130			
83		O sealing 20×3.1	1	131			
84		anti-drop plate	1	132			
85	031925	oil cover	1	133			
86		suction tube circlip	2	134			
87		suction tube 2.5×6×105	1	135			
88	017075	suction jet	1	136			
89	031924	left case	1	137			
90	10689	shield ring 35	1	138			
91	10692	oil seal 15×35×4.5	1	139			
92	10694	igniter	1	140			
93		extinction conductor	1	141			
94		igniter cap	1	142			
95		dust cover	2	143			
96	10697	case body sealing plate	1	144			