


VHT 500

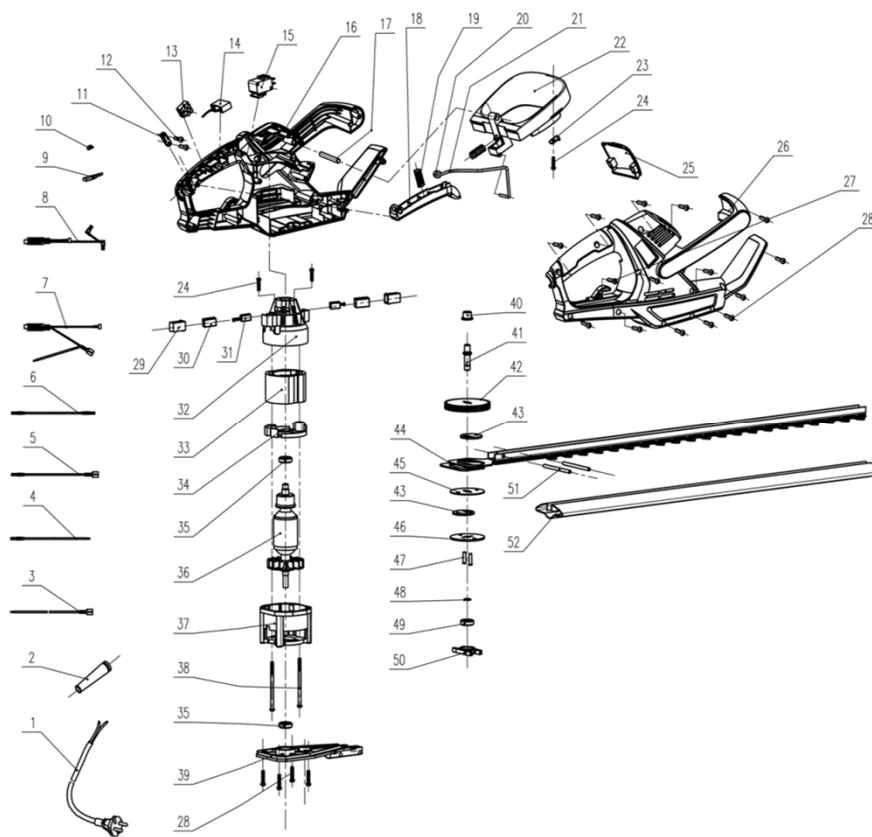

No	Code	Name	Qty	No	Code	Name	Qty
1		Power line	1	25		Front block	1
2		Cable sheath	1	26	036623	Right housing	1
3		Connecting wire 1	1	27		Self-tapping screw 3*12	1
4		Connecting wire 3	1	28		Self-tapping screw 4*16	19
5		Connecting wire 2	1	29	036624	Brush shell	2
6		Connecting wire 6	1	30	036625	Bush	2
7		Inductance 1	1	31	036626	Carbon brush	2
8		Connecting wire 4	1	32	036627	Brush support	1
9		Mother terminal	1	33	036628	Stator	1
10		Tooth profile terminal	1	34	036629	Wind screen	1
11		Cable clamp	1	35	013807	608 Bearing	2
12		Self-tapping screw 4*10	2	36	036630	Rotor	1
13		Terminal	2	37	036631	Tooth support	1
14		Capacity	1	38		Three combination self-tapping screw 4*65	2
15	036619	Switch	1	39	036632	Holder	1
16	036620	Left housing	1	40		Oil bearing	1
17		Front trigger	1	41		Output shaft	1
18	036621	Back trigger	1	42	036633	Big gear wheel	1
19		Spring	2	43	036634	Wobbler	2
20		Idler wheel	1	44	036635	Blade assy'	1
21		Connecting rod	1	45	036636	Base plate	1
22	036622	Foretrigger	1	46	036637	Base plate	1
23		Clamp	1	47	036638	Pin	2
24		Flange face self-tapping screw 3*12	3	48		Axis with circlips	1

